



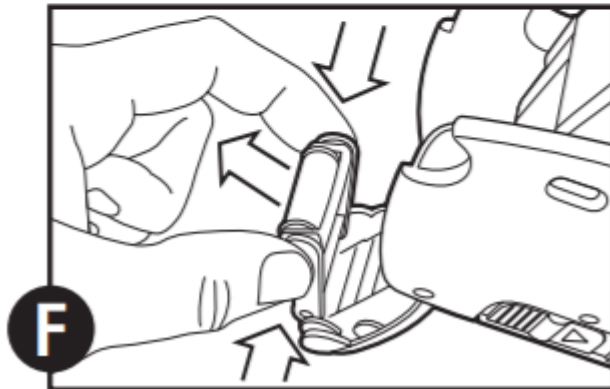

Changing the Ink Roller (Inkers)

- The ink roller is located behind the door at the nose of the labeler. Access the ink roller by pulling the front out and down (figure E).
- Pinch the two tabs at the ends of the ink roller. Pull up and out to release the ink roller from its position (figure F).
- Dispose the old ink roller and insert new ink roller.
- Replace the ink roller by performing the steps above in reverse order.
- Close the front protection plate.
- **NEVER** re-ink an ink roller - the ink rollers are not designed to absorb ink.
- Recommend changing the ink roller after every sleeve for a crisp clear print on your labels.

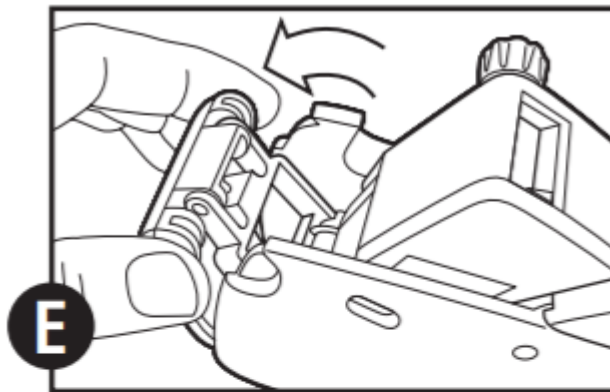

For more information contact your Garvey Representative
135 Merchant St, Suite 150 • Springdale, OH 45246 • 1-800-543-1908
www.garveyproducts.com • Email: garveycares@garveyproducts.com